

RDA ReadStation Tool User Guide

Catalog

1. Interface Description.....	3
1.1 Main User Interface	3
2. Operation Guide.....	4
2.1 Quick Start Guide	4
2.2 Instruction of production and test	5
2.2.1 Illustration of COM Mode	5
2.3 Language Setting	5

1.Interface Description

1.1 Main User Interface

Run ReadStation.exe program, the main interface of the program is shown in Figure 1-1.

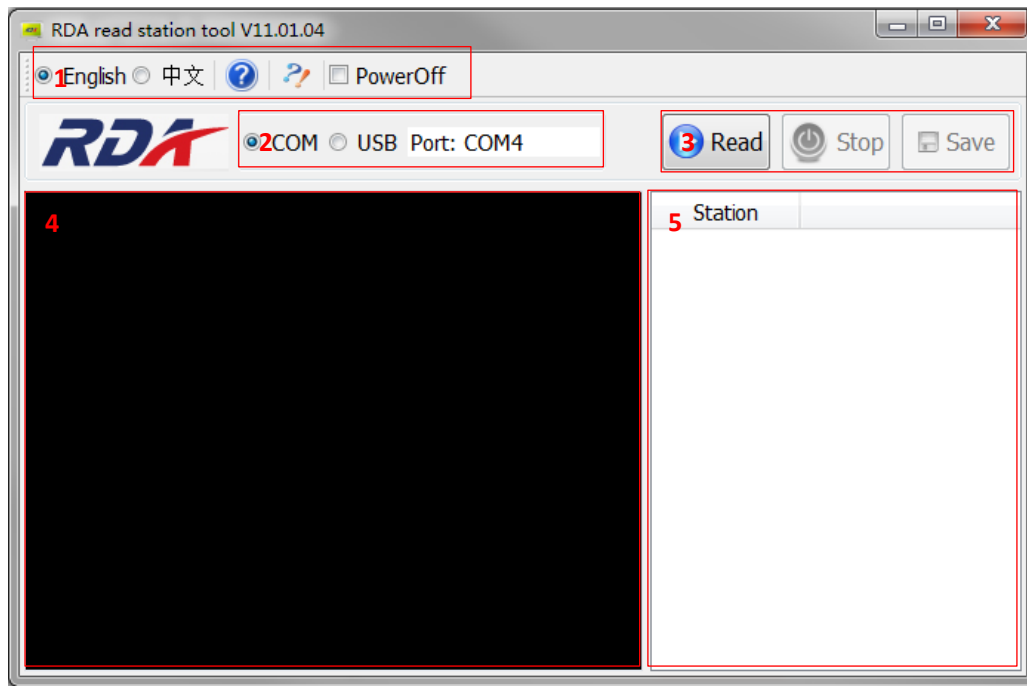


Figure 1-1 Main user interface of ReadStation tool

Description of the elements in the main interface is displayed in Table 1-1:

Table 1-1 Description of the elements in the main interface

Icons	Description
1	Language setting, help and about button
2	Port select
3	Read/Stop/Save button
4	Information output widget
5	List of stations

2. Operation Guide

2.1 Quick Start Guide

1. Running

Run ReadStation.exe. The main interface is shown as Figure 1-1.

2. Connection mode select

Click USB/COM button on the interface to select the COM connection mode. The port name will automatically display on the port button after the mobile phone successfully connected.

3. Read station

Click the Read button on main interface, and begin to read the station in mobile phone.

4. Verify Complete

The information box output information during the read process. Stations have been read listed on the interface. Shown as follow figure 2-1:

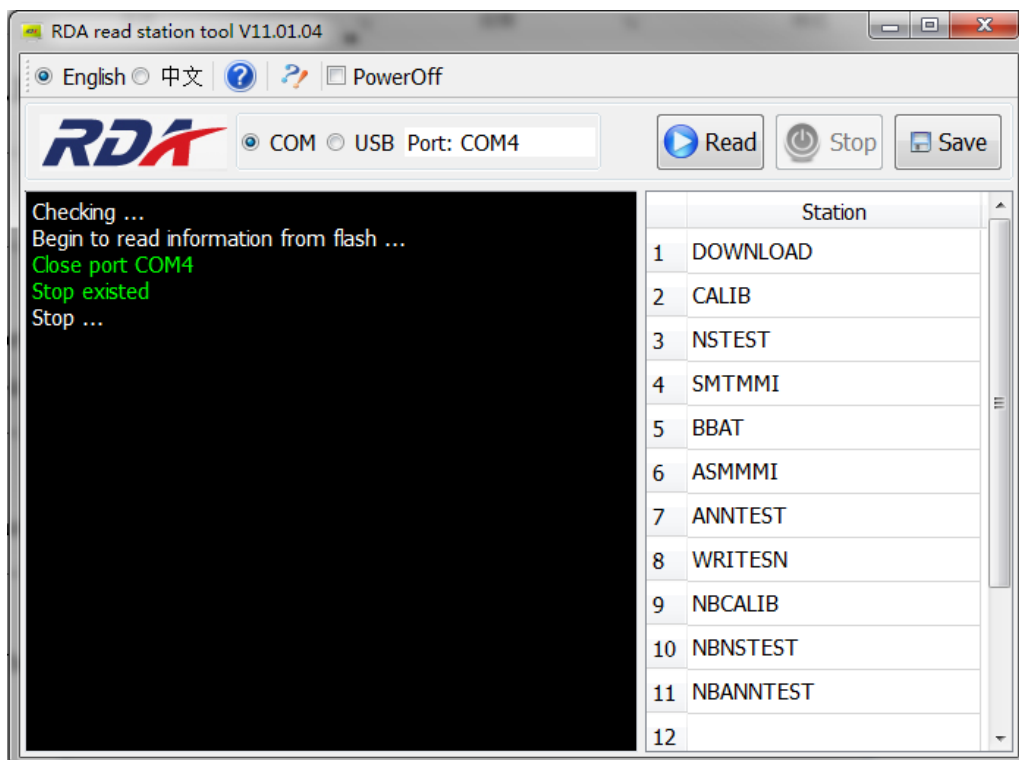


Figure 2-1 Read station information

5. Save check station

Click save button on interface, the stations have been read will be saved in configuration file, as follow Figure 2-2:

```
1  [VERSION]
2  # version :      0xFAC00200
3  MAGIC NUMBER    = 0xFAC00200
4
5  [STATION]
6  # Max. station number is 15
7  # Max. station name length is 12 characters
8  # Empty station name means the station index in't used
9  # Warning:CALIB/SMTMMI/BBAT/ANNTTEST/NSTEST/ASMMMI can not be renamed!!
10 STATION 0       = DOWNLOAD
11 STATION 1       = CALIB
12 STATION 2       = NSTEST
13 STATION 3       = SMTMMI
14 STATION 4       = BBAT
15 STATION 5       = ASMMMI
16 STATION 6       = ANNTTEST
17 STATION 7       = WRITESN
18 STATION 8       = NBCALIB
19 STATION 9       = NBNSTEST
20 STATION 10      = NBANNTTEST
21 STATION 11      =
22 STATION 12      =
23 STATION 13      =
24 STATION 14      =
25
```

Figure 2-2 Configuration generated when click save button

2.2 Instruction of production and test

2.2.1 Illustration of COM Mode

If the COM mode is used, it needs to connect the phone to PC using USB serial device, and the battery powered is required. Hold down the power button until the screen is lighted up. Make sure to start when the screen is lit.

Note: The COM range is 0 ~ 255. If the port is out of the prescribed scope, such as COM366, please select the port again.

2.3 Language Setting

Switch to Chinese / English through the button

